

## LEGEND:



WHY SYNC TECHNOLOGY



ACT ON THE RECEIVER



DIRECT FUNCTIONING

<b>ACM</b> TX2, TX2 COLOR, TX4		<b>DITEC/ENTREMATI</b> BIXLP, GOL4, BIXLG, ZEN		<b>NICE</b> SMILO, FLOR-S, VERY-VR, FLOR-S ERA, ONE (ON), ON ERA, INTI, ERGO, PLANO, ONE (ON FM)		<b>STAGNOLI</b> KALLISTO, VENUS AV223	
<b>ADYX</b> TE4433H BLUE, 433-HG BRAVO		<b>DOORHAN</b> TRANSMITTER 4		<b>NORMSTHAL</b> RCU 2/4 K, EA 433 2/4 K		<b>TAU</b> 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
<b>AERF</b> COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		<b>DOORMATIC</b> MILENY, MILENY-EVO		<b>NORTON</b> NEO, TXCD		<b>TELCOMA</b> FM400E, FM400	
<b>ALLMATIC</b> BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		<b>ECOSTAR</b> RSC, RSE, RSZ		<b>NORTON</b> GO NORTON, GO MINI NORTON		<b>TOR LIFT</b> TORMIT4	
<b>APERIO</b> GO, GO PRO, GO MINI		<b>ERREKA</b> IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868		<b>NOVOFERM</b> MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI-NOVOTRON 50, MNHS, MINI NOVOTRON 522		<b>V2</b> TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433, PHOENIX 868, PHOX 868	
<b>APERTO (Sommer)</b> 4020-TX03-434, TX02-434-2, TX02-868-2		<b>FAAC</b> TML 4335LH, DL 868 SLH, XT 868 SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 868 SLH BLACK, XT 433 SLH BLACK		<b>O&amp;O</b> TX, T.COM R4-2, T.COM R8-2, TWIN, TX (NEO)		<b>VDS</b> ECO-R, TRQ P	
<b>APRIMATIC</b> TR, TM4, TXM		<b>FAAC</b> XT 433 RC, TE433HG, XT4 433 RCBE		<b>PRATEL</b> MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E			
<b>AVIDSEN</b> 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		<b>FADINI</b> JUBI-SMALL, JUBI 433, DIVO 71/4		<b>PUJOL</b> TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO			
<b>BALLAN</b> FM400, FM400E		<b>GENIUS</b> AMIGO JA332-JA334 868, AMIGOLD 868, KILO 433 JLC, KILO 868 JLC		<b>RIB</b> LITHIO			
<b>BENINCA</b> TO. GO. WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO. QV, HAPPY VA		<b>GENIUS</b> BRAVO, ECHO		<b>ROPER</b> NEO			
<b>BENINCA</b> IO, TO.GO. VA		<b>GIBIDI</b> AU1600, AU1600 WOOD, AU1680, AU1680 WOOD, DOMINO, MAKO		<b>ROPER</b> GO ROPER, GO MINI ROPER			
<b>BFT</b> MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		<b>JCM</b> NEO, TWIN		<b>SABUTOM</b> BROOVER, BROSTAR			
<b>CARDIN</b> TRQ 5449, TRQ 5449 GREEN (PRECODE), TXQ 5449, TXQ 5449 GREEN, TRQ 5486, TXQ 5486, 5437 TX, XRADO		<b>JCM</b> GO, GO PORTIS, GO NORTON, GO MINI		<b>SEAV</b> BE HAPPY RS, BE SMART			
<b>CASALI</b> GENIUS/CASALI A252RC		<b>KBLUE</b> ETH-TEL01		<b>SECULUX</b> NEO			
<b>CHAMBERLAIN/LIFT MASTER/MOTOR LIFT</b> 953ESTD, 371 LM, 971LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7, 1A5477, 1A6487, 132B2372, 94330EM-L/9333EML/94335EML, 84330EML/84333EM-L/84335EML, 8747EML		<b>KEY</b> 900TXB-42R, TXB 44R, SUB 44R		<b>SILVELOX</b> Mhz 2007, QUARZ SAW			
<b>CLEMSA</b> MUTANCODE, T, T-8, E-CODE N		<b>KING GATES</b> CLIPPER, STYLO		<b>SIMINOR</b> CVXNL, MITTO			
<b>CLEMSA</b> Attenzione! Codice Fisso MASTERCODE MV		<b>KLING</b> KUA, KUA E, KUA S		<b>SIMINOR</b> SIM433			
<b>DASPI</b> ZERO RC		<b>LABEL</b> SPYCO		<b>SOMFY</b> K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA			
<b>DEA SYSTEM</b> PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MIO TR, GT2M, TRN		<b>LIFE</b> FIDO		<b>SOMMER</b> 4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4			
		<b>MHOUSE</b> TX3, TX4, GTX4					
		<b>MOOVO</b> MT4G					

### WHY SYNC TECHNOLOGY

Close to the automation and before using the original remote control, press and hold pressed the button on the WHY EVO remote control until the LED starts to flash. Wait for the end of the flashing.

### ACT ON THE RECEIVER

Close to the automation and before using the original remote control, press and hold pressed the PRG or PGM button in the receiver; then press the button of WHY EVO remote control.

### DIRECT FUNCTIONING

Close to the automation and before using the original remote control, press the button of WHY EVO remote control for 4/5 times.